Purge Vent Option

The purge and vent option provides the means to purge and vent the manifold when changing cylinders or before performing maintenance. Purging is often specified for brass or stainless steel manifolds at the time of order.

For brass manifolds - purge the header sections only.

For stainless steel manifolds - purge both the header and control sections.

ORDERING INFORMATION

OptionPart NumberBrass Purge279-424611Stainless Purge279-819538

