


Vaporizer Switchover Manifold

Acme's vaporizer switchover manifold provides automatic switching from vaporizer that has become inefficient (due to frost build-up) to a vaporizer that has been warmed by ambient air and is ready for peak performance.

Because health care installations are required to maintain a constant, consistent supply of product, vaporizer switchover manifolds can eliminate frosting issues that can affect performance and possibly limit service.

Automatic switchover vaporizer manifolds can be set to take the current vaporizer off-line and bring another one on-line at pre-determined intervals, allowing both units to work at optimum levels. Because the change between vaporizers is automatic, switchover requires minimal user involvement.

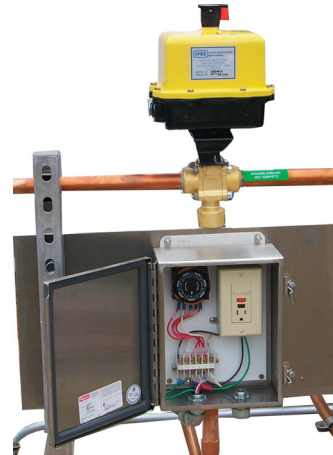

Ordering Information

<u>Size</u>	<u>Part Number</u>
1"	271-821731
1½"	271-821732